

**PUMP STATION Low Profile** Lens debris and fluid pumping system

Pump Station is used with Microseparator®, HC3, or HC6 systems. All fluid and lens debris is pumped from the generator overhead via plastic pipe to the remote Chip Separator or Compactor Assembly. Compatible with all organic milling debris and all organic finishing debris.



Working Range: One generator

**Includes**

- Stainless steel pump and housing
- Fabricated steel enclosure with lens retrieval access cover
- PLC control panel
- Automatic level control system
- Automatic valve for supply pipeline
- Automatic valve for discharge pipeline



**Dimensions**

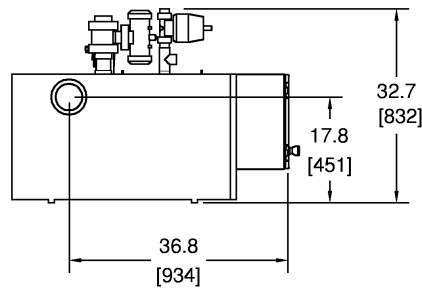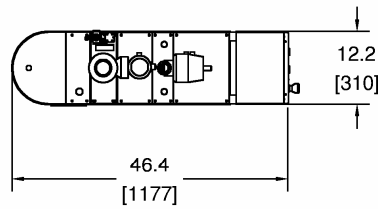

**Utility Requirements**

**Pump Station Low Profile**

**Power:**  
208V, 7A, 60 HZ, 3 phase  
400V, 4A, 50 HZ, 3 phase

**Compressed Air:**  
60 PSI @ 1 SCFM  
4.2 bar @ 28 l/m